FS-977

User's Manual Edition 1.2

Copyright

Copyright[©] 2002, 2003. All rights reserved. This document is copyrighted and all rights are reserved. The information in this document is subject to change without prior notice to make improvements to the products.

This document contains proprietary information and protected by copyright. No part of this document may be reproduced, copied, or translated in any form or any means without prior written permission of the manufacturer.

All trademarks and/or registered trademarks contains in this document are property of their respective owners.

Disclaimer

Taiwan Commate Computer Inc. shall not be liable for any incidental or consequential damages resulting from the performance or use of this product. Taiwan Commate Computer Inc. does not issue a warranty of any kind, express or implied, including without limitation implied warranties of merchantability or fitness for a particular purpose.

The company has the right to revise the manual or include changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or changes.

Trademark

All trademarks are the property of their respective holders.

Any question please visit our website at http://www.commell.com.tw.

Packing List

Hardware

| FS-977 Single Board Computer | X 1 |
|---|--|
| Cable Kit | |
| 34-pin FDD Cable | X 1 X 1 X 1 X 1 X 1 X 2 X 1 X 1 |
| 3-pin to 4-pin ATX cable Printed Matter and Software User's Manual Driver CD | X 1 X 1 X 1 |

Table of Content

| Chapter 1. | Introduction | 5 |
|------------|-------------------------------|------|
| 1.1 | Product Overview | . 5 |
| 1.2 | Specification | . 6 |
| 1.3 | Component Placement | . 9 |
| | | |
| Chapter 2. | Hardware Setup | 11 |
| 2.1 | Jumper and Connector Location | 11 |
| 2.2 | CPU and DRAM Setting | |
| 2.3 | CMOS Setting | |
| 2.4 | Watchdog Timer Setting | |
| 2.5 | Embedded Solid State Disk | 16 |
| 2.6 | Power and Fan Connector | |
| 2.7 | VGA Interface | 18 |
| 2.8 | Ethernet Interface | 19 |
| 2.9 | Audio Interface | 20 |
| 2.10 | Switch and Indicator | 21 |
| Chapter 3. | BIOS Setup | 23 |
| Chapter 4. | Driver Installation | 25 |
| Appendix. | A I/O Port Pin Assignment | 27 |
| A.1 | IDE Port | 27 |
| A.2 | Floppy Port | 28 |
| A.3 | Parallel Port | 29 |
| A.4 | Serial Port | . 30 |
| A.5 | USB Port | 31 |
| A.6 | IrDA Port | 31 |
| A.7 | VGA Port | 32 |
| A.8 | LAN Port | 32 |
| A.9 | AT Keyboard Port | 33 |
| A.10 | PS/2 Keyboard and Mouse Port | 33 |

| Appendix | B. Flash the BIOS | 35 |
|-----------------|----------------------|----|
| B.1 | BIOS Auto Flash Tool | 35 |
| B.2 | Flash Method | 35 |
| | | |
| Appendix | C. System Resources | 37 |
| | C. System Resources | |
| | I/O Port Address Map | 37 |

Chapter 1. Introduction

1.1 Product Overview

FS-977 SBC (Single Board Computer) is an all-in-one industrial full-size PICMG (PCI/ISA)-bus CPU card based on Intel mPGA478 Pentium 4 architecture. With Intel Brookdale-G chipset, FS-977 offers the value solution with Intel NetBurst micro-architecture, 533/400 MHz of FSB, 2 GB DDR200/266/333 DDR SDRAM, support https://example.com/hyper-Threading Technology (Pentium 4 processor at 3.06 GHz or higher), Intel Brookdale-G GMCH built-in advanced 3D SVGA, and dual Intel PRO/100+ LAN and USB 2.0 high speed I/O interfaces.

Based on Intel's long term supply chipset, **FS-977** should be the ideal solution for long life industrial applied computing platform with high computing capacity and cost effect. The onboard dual Intel PRO/100+ LAN, M-systems DiskOnChip SSD (Solid State Disk), and ISA 64mA high drive capacity also make **FS-977** be the value Pentium 4 DDR platform for:

Value Industrial Computing Platform: Intel mPGA478 Pentium 4 / Celeron CPU with 533/400 MHz FSB and 2 GB DDR200/266/333 SDRAM of system memory, FS-977 offers the high-end industrial computing platform with low cost Intel integrated solution. Onboard Intel GV chipset support <a href="https://docs.ncbi.org/ht

Low Cost Multi-media Solution: Intel Brookdale-G chipset built-in advanced 3D VGA controller offers the value integration solution for low cost multi-media computing platform. Such as VoD (video on demand), DVR (Digital Video Recorder), digital video broadcasting (DVB), streaming, surveillance, compression (MPEG), interaction server, workstation and terminal appliances.

Redundant Network Reliability: dual Intel PRO/100+ 10/100 Mbps Fast Ethernet interfaces for high reliability of redundant LAN, or external / internal dual direction networking applications.

Hi-Speed USB 2.0 Interface: Intel ICH4 built-in USB 2.0 controller let **FS-977** offer the high speed USB 2.0 interface with 480 Mbps of data transfer rate. It makes **FS-977** be the platform to link with high-end USB 2.0 devices including digital camera, USB hard disk, and other USB 2.0 based peripherals.

1.2 Specification

| General Specificati | General Specification | | |
|---------------------|--|--|--|
| Form Factor | Full-size PICMG-bus CPU Card / Slot PC PICMG version 1.0 (Rev. 2.0), PCI version 2.0 compliant | | |
| CPU | Intel mPGA478 Pentium 4, Celeron @ 533/400 MHz FSB | | |
| | Support Intel Hyper-Threading Technology Support Northwood / Willamette Pentium 4 / Celeron CPU | | |
| Memory | 2 GBytes DDR200/266/333 SDRAM on 2 x 184-pin DIMM sockets. (No ECC/register DIMM support) | | |
| Chipset | Intel 82845GV GMCH and 82801DB ICH4 | | |
| BIOS | Phoenix-Award 2Mb PnP flash BIOS | | |
| Green Function | Power saving mode supported in BIOS with DOZE, STANDBY and SUSPEND modes. ACPI version 1.0 and APM version 1.2 | | |
| Watchdog Timer | compliant Generates NMI or system reset watchdog timer with 1 to 255 sec. / min. of time out value | | |
| Real Time Clock | Intel ICH4 built-in RTC with lithium battery | | |
| Enhanced IDE | PCI enhanced IDE interface supports dual ports up to 4 ATAPI devices with UltraATA/100 supported | | |
| ISA High Drive | ISA 64mA high Drive capacity with TI 245 buffer on address and data bus | | |

| Multi-I/O Port | |
|----------------|---|
| Chipset | Intel 82801DB ICH4 and Winbond W83627HF-AW LPC super-I/O controller |
| Serial Port | Two RS-232 serial ports. Both with 16C550 compatible UART and 16 bytes FIFO |
| USB Port | Four USB 2.0 ports with 480 Mbps of data transfer rate |
| Parallel Port | One bi-direction parallel port with SPP/ECP/EPP mode |
| Floppy | One floppy port supports up to two FDD |
| IrDA Port | One IrDA compliant Infrared interface supports SIR |
| K/B & Mouse | PS/2 keyboard and mouse ports, AT keyboard port |

| Solid State Disk Interface | | |
|----------------------------|---|--|
| Flash Type | M-systems DiskOnChip 2000, DiskOnChip Millennium, IDE Pro and DiskOnModule (DOM) solid state flash disk | |
| Package | 32-pin DIP JEDEC (DiskOnChip) 40-pin IDE port (IDE Pro, DiskOnModule) | |
| Capacity | 576 MB of DiskOnChip and 512 MB of DiskOnModule | |

| VGA Display Interface | | |
|-----------------------|---|--|
| Chipset | Intel 845GV GMCH built-in 256-bit 3D VGA controller | |
| Video Memory | Auto detect dynamic video memory up to 64 MBytes | |
| Display Type | CRT, LCD monitor and analog display | |
| Connector | External DB15 female connector on bracket for CRT | |
| | Internal 16-pin header for analog VGA display | |


| Ethernet Interf | ace |
|-----------------|---|
| Chipset | Dual Intel PRO/100+ LAN interface |
| Ompoci | Primary LAN (LAN1): Intel ICH4 and Intel 82562ET |
| | Optional secondary LAN (LAN2): Intel 82559ER |
| Туре | 10Base-T / 100Base-TX, auto-switching Fast Ethernet |
| | Full duplex, IEEE802.3U compliant |
| Connector | External dual RJ45 with LED on bracket |


| Audio Interface | |
|-----------------|---|
| Chipset | Intel ICH4 built-in AC97 3D audio controller with codec |
| Interface | Line-in, line-out, CD-in, Mic-out |
| Connector | 10-pin header for line-in, line-out and Mic-out |
| | 4-pin header for CD-in |

| Power and Environment | | |
|-----------------------|--|--|
| Power Req. | +5V, +12V, -12V DC input from PICMG backplane Additional +12V on 4-pin connector for Pentium 4 PSU | |
| ATX Function | 3-pin ATX interface with 5V standby and power-on | |
| Dimension | 338 (L) x 122 (H) mm, standard PICMG form factor | |
| Temperature | Operating within $0 \sim 60^{\circ}\text{C}$ (32 ~ 140°F) | |
| | Storage within -20 ~ 85°C (-4 ~ 185°F) | |
| ЕМІ | CE/FCC class A certified | |

| Ordering Code | |
|---------------|---|
| FS-977VL | Full-size PICMG mPGA478 DDR CPU Card Based on Intel 845GV and |
| | ICH4, with 533/400 MHz FSB, Intel VGA, Single Intel PRO/100+ LAN, |
| | Audio, Hi-Speed USB 2.0, DOC Interfaces and ISA 64mA High Drive |
| | Capacity |
| FS-977VL2 | Full-size PICMG mPGA478 DDR CPU Card Based on Intel 845GV and |
| | ICH4, with 533/400 MHz FSB, Intel VGA, Dual Intel PRO/100+ LAN, |
| | Audio, Hi-Speed USB 2.0, DOC Interfaces and ISA 64mA High Drive |
| | Capacity |

1.3 Component Placement

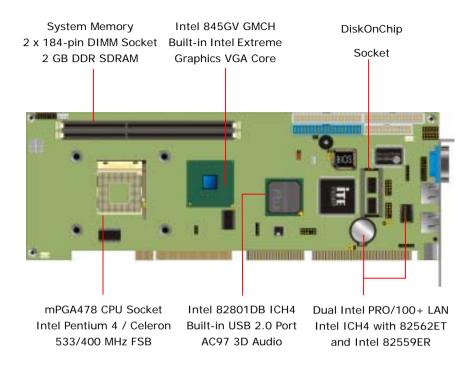


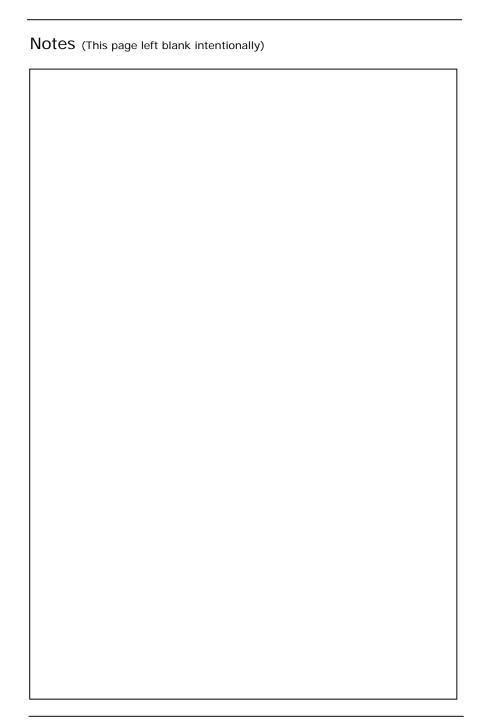

Chapter 2. Hardware Setup

This chapter contains the information for installation of hardware. The install procedure includes jumper settings, CPU and memory installation, fan, I/O and panel connections.

2.1 Jumper and Connector Location

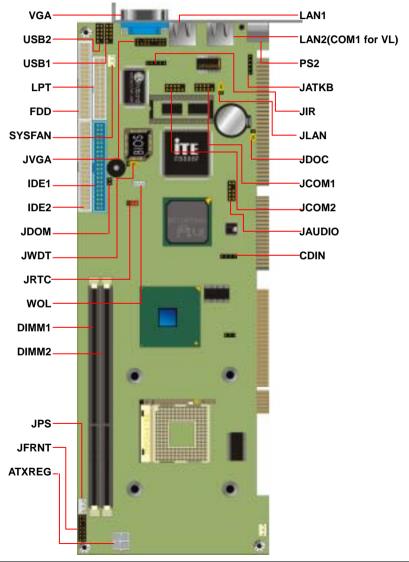

2.1.1 Jumpers Reference

| Jumper | Function | Section |
|--------|--------------------------------------|------------|
| JRTC | COMS Operate / Clear Setting | <u>2.3</u> |
| JWDT | Watchdog Timer NMI / Reset Setting | <u>2.4</u> |
| JDOC | DiskOnChip SSD Address Setting | <u>2.5</u> |
| JDOM | DiskOnModule SSD Power Setting | <u>2.5</u> |
| JLAN | Secondary LAN Enable/Disable Setting | <u>2.8</u> |

2.1.2 Connectors Reference

Internal Onboard Connector

| Connector | Function |
|-----------|---------------------------------------|
| CPU | MicroPGA478 478 CPU Socket |
| DIMM1/2 | 184-pin DIMM Socket |
| IDE1/2 | 40-pin Primary / Secondary IDE Port |
| FDD | 34-pin FDD Port |
| LPT | 26-pin Parallel Port |
| JCOM1/2 | 10-pin COM1/2 Serial Port |
| USB1/2 | 10-pin 1st / 2nd (3rd / 4th) USB Port |
| JIR | 5-pin SIR IrDA Port |
| DOC | 32-pin DIP DiskOnChip Socket |
| JATKB | 5-pin AT Keyboard Connector |
| ATXREG | 4-pin Additional +12V Power Connector |
| JPS | 3-pin ATX Signal Connector |
| JFRNT | 14-pin Switch and Indicator Connector |
| CPUFAN | 3-pin +12V CPU Fan Connector |
| SYSFAN | 3-pin +12V System Fan Connector |
| JVGA | 16-pin Internal VGA Port |
| JAUDIO | 10-pin Audio Port |
| CDIN | 4-pin CD-in Interface |
| WOL | 3-pin Wake-On-LAN Interface |

External Connector on Bracket

| Connector | Function | | |
|-----------|-------------------------------------|----------------|--|
| VGA | DB15 Female VGA Connector | | |
| LAN1 | RJ45 LAN1 Connector | | |
| LAN2 | RJ45 LAN2 Connector VL2 only | | |
| PS2 | 6-pin MiniDIN PS/2 Keyboard & Mouse | | |
| COM1 | DB9 Male serial port connector | VL only | |

2.2 CPU and DRAM Setting

The board is based on Intel Socket 478 architecture, supports Intel mPGA478 Pentium 4 / Celeron CPU at 533/400 MHz FSB. The **FS-977** is based on Intel 845GV GMCH, supports 533 and 400 MHz FSB.

System memory of this board supports up to 2 GB DDR200/266/333 SDRAM on 2 184-pin DIMM sockets. Please notices that Intel 845GV GMCH doesn't support ECC and register DIMM.

2.3 CMOS Setting


The board's data of CMOS can be setting in BIOS. If the board refuses to boot due to inappropriate CMOS settings, here is how to proceed to clear (reset) the CMOS to its default values.

Jumper: JRTC

Type: onboard 3-pin header

| JRTC | Mode |
|------|------------------|
| 1-2 | Clear CMOS |
| 2-3 | Normal Operation |

Default setting

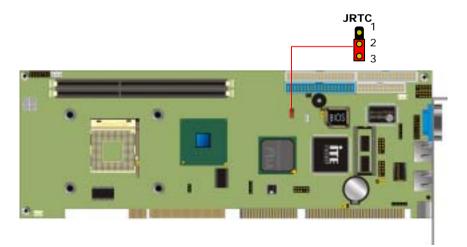

2.4 Watchdog Timer Setting


The watchdog timer makes the systems auto-reset while it stop to work for a period. The onboard watchdog timer can be setup as system reset or active NMI mode by jumper JWDT.

Jumper: JWDT

Type: onboard 3-pin header

| JWDT | Watchdog Timer | |
|------|----------------|--|
| 1-2 | Active NMI | |
| 2-3 | Reset | |

Default setting

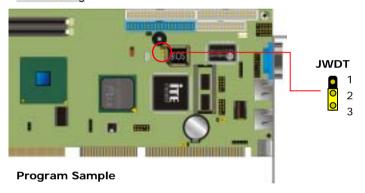


Watchdog timer setup as system reset with 5 second of timeout

| | . , |
|--------|------------------|
| 2E, 87 | |
| 2E, 87 | |
| 2E, 07 | |
| 2F, 08 | Logical Device 8 |
| 2E, 30 | Activate |
| 2F, 01 | |
| 2E, F5 | Set as Second* |
| 2F, 00 | |
| 2E, F6 | Set as 5 |
| 2F, 05 | |

^{*} Minute: bit 3 = 0; Second: bit 3 = 1

2.5 Embedded Solid State Disk

The board supports both 32-pin M-systems DiskOnChip 2000 and IDE-based DiskOnChip IDE Pro and DiskOnModule (DOM) embedded flash disk. The onboard 32-pin socket, DOC, supports DiskOnChip 2000 single chip flash disk in 32-pin DIP JEDEC with jumper selectable address on jumper JDOC; onboard 40-pin IDE2 box header supports normal DOM (DiskOnModule) or M-systems DiskOnChip IDE Pro flash disk with jumper selectable +5V Vcc power for cable free applications on jumper JDOM.

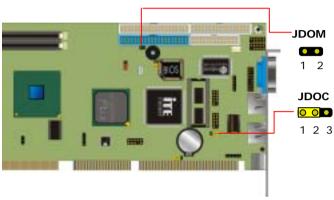

DiskOnChip 2000 Address Setting

Jumper: JDOC

Type: onboard 3-pin header

| JDOC | DiskOnChip Address | | |
|------|--------------------|--|--|
| 1-2 | D000h | | |
| 2-3 | D800h | | |

Default setting


DOM or DiskOnChip 2000 IDE Pro Power Setting

Jumper: JDOM

Type: onboard 2-pin header

| JDOM | +5V on Pin-20 of IDE2 |
|-----------------|-----------------------|
| OFF | Disable |
| ON | Enable |
| Default setting | |

2.6 Power and Fan Connector

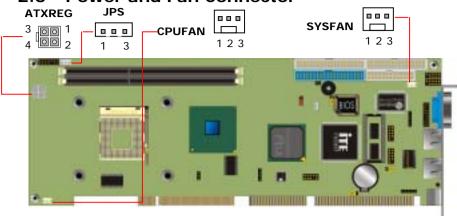

Connector: ATXREG

Type: 4-pin Standard Pentium 4 Additional +12V Power Connector

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | Ground | 2 | Ground |
| 3 | +12V | 4 | +12V |

Connector: JPS

Type: 3-pin ATX Function Connector

| Pin | Description | Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|-----|-------------|
| 1 | 5V Standby | 2 | Ground | 3 | Power On |


Connector: CPUFAN, SYSFAN

Type: 3-pin Fan Power Wafer Connector

| Pin | Description | Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|-----|-------------|
| 1 | Ground | 2 | +12V | 3 | Fan Control |

2.7 VGA Interface

The board is integrated with Intel 845GV GMCH built-in Intel Extreme Graphics with 266 MHz VGA core and Intel Dynamic Video Memory up to 64MBytes shared with system memory. The CRT / analog VGA interface includes one external DB15 female connector on bracket and one internal 16-pin header on board.

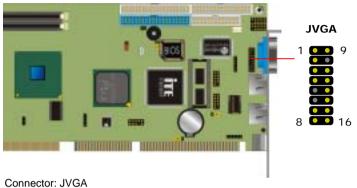

Type: 16-pin header

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | Red | 9 | Green |
| 2 | Blue | 10 | N/C |
| 3 | Ground | 11 | Ground |
| 4 | Ground | 12 | Ground |
| 5 | N/C | 13 | Ground |
| 6 | N/C | 14 | Data |
| 7 | HSYNC | 15 | VSYNC |
| 8 | Clock | 16 | N/C |

2.8 Ethernet Interface

The board integrated with dual Intel PRO/100+ Fast Ethernet interfaces at the type of 10Base-T/100Base-TX auto-switching Fast Ethernet with full duplex and IEEE 802.3U compliant. Both of them connect via RJ45 connectors on bracket. The LAN2 can enable or disable by jumper JLAN.


The primary LAN interface is controlled by Intel ICH4 with Intel 82562ET and setting as LAN1. It provides the same performance as Intel 82559 LAN with the same driver. The secondary LAN interface is controlled by Intel 82559ER chipset and setting as LAN2.

Jumper: JLAN

Type: onboard 3-pin header

| JLAN | LAN2 Enable / Disable Setting | | |
|------|-------------------------------|--|--|
| 1-2 | Enable | | |
| 2-3 | Disable | | |


Default setting

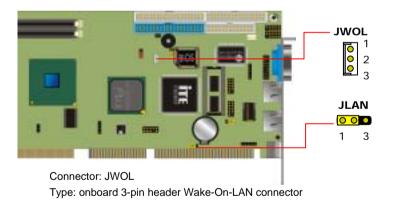

| Pin | 1 | 2 | 3 |
|-------------|----------|--------|-------------|
| Description | WOL-Ctrl | Ground | +5V Standby |

2.9 Audio Interface

The board integrates with AC97 3D audio interface by Intel ICH4 and codec, provides line-in, line-out, Mic-in and CD-in interfaces for industrial applications with audio function.

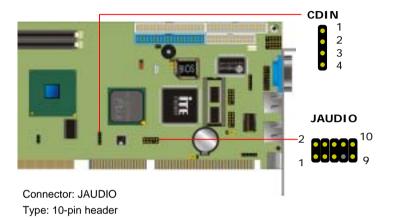


| Pin | Description | Pin | Description |
|-----|------------------|-----|-----------------|
| 1 | Line – Right | 2 | Ground |
| 3 | Line – Left | 4 | MIC |
| 5 | MIC | 6 | Ground |
| 7 | N/C | 8 | Line Out – Left |
| 9 | Line Out – Right | 10 | Ground |
| | | | |

Connector: CDIN Type: 4-pin header

| Pin | Description |
|-----|-------------|
| 1 | CD – Left |
| 2 | Ground |
| 3 | Ground |
| 4 | CD – Right |


2.10 Switch and Indicator

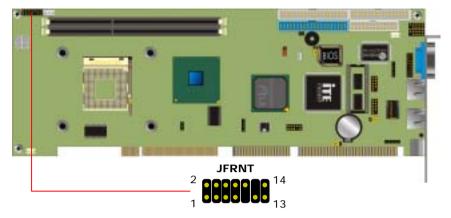

Connector: JFRNT

Type: onboard 14-pin header

| Function | Signal | PIN | | Signal | Function | |
|----------|---------|-----|--|--------|----------|---------|
| IDE LED | Vcc (+) | 1 | | 2 | (+) Vcc | Power |
| IDE LED | Active | 3 | | 4 | N/C | LED |
| Reset | Reset | 5 | | 6 | GND | LED |
| Reset | GND | 7 | | 8 | Vcc | |
| | N/C | 9 | | 10 | N/C | Smaakar |
| Power | PWRBT | 11 | | 12 | N/C | Speaker |
| Button | GND | 13 | | 14 | SPKIN | |

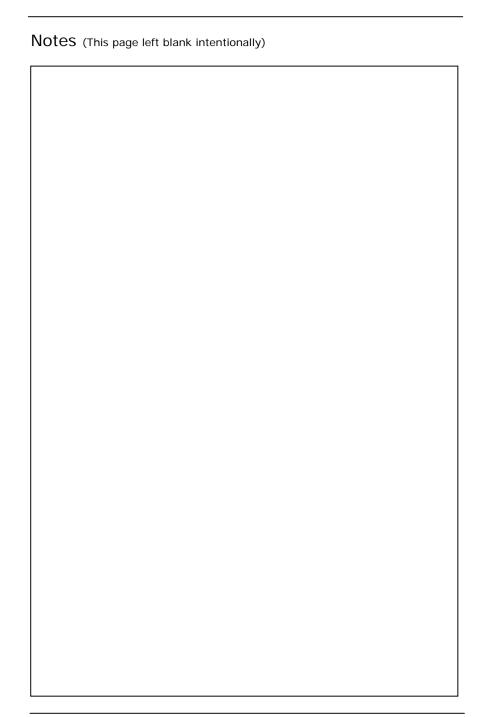

Chapter 3. BIOS Setup

The single board computer uses the Award BIOS for the system configuration. The Award BIOS in the single board computer is a customized version of the industrial standard BIOS for IBM PC AT-compatible computers. It supports Intel x86 and compatible CPU architecture based processors and computers. The BIOS provides critical low-level support for the system central processing, memory and I/O sub-systems.


The BIOS setup program of the single board computer let the customers modify the basic configuration setting. The settings are stored in a dedicated battery-backed memory, NVRAM, retains the information when the power is turned off. If the battery runs out of the power, then the settings of BIOS will come back to the default setting. The BIOS section of the manual is subject to change without notice and is provided here for reference purpose only. The settings and configurations of the BIOS are current at the time of print, and therefore they may not be exactly the same as that displayed on your screen.

To activate CMOS Setup program, press < DEL > key immediately after you turn on the system. The following message "Press DEL to enter SETUP" should appear in the lower left hand corner of your screen. When you enter the CMOS Setup Utility, the Main Menu will be displayed as **Figure 3-1**. You can use arrow keys to select your function, press < Enter > key to accept the selection and enter the sub-menu.

Figure 3-1. CMOS Setup Utility Main Screen

Phoenix - Award BIOS CMOS Setup Utility

>Standard CMOS Features >Frequency/Voltage Control >Advanced BIOS Features Load Fail-Safe Defaults >Advanced Chipset Features Load Optimized Defaults >Integrated Peripherals Set Supervisor Password >Power Management Setup Set User Password >PnP / PCI Configurations Save & Exit Setup >PC Health Status **Exit Without Saving** $\uparrow \downarrow \rightarrow \leftarrow$: Select Item Esc: Quit F10: Save & Exit Setup

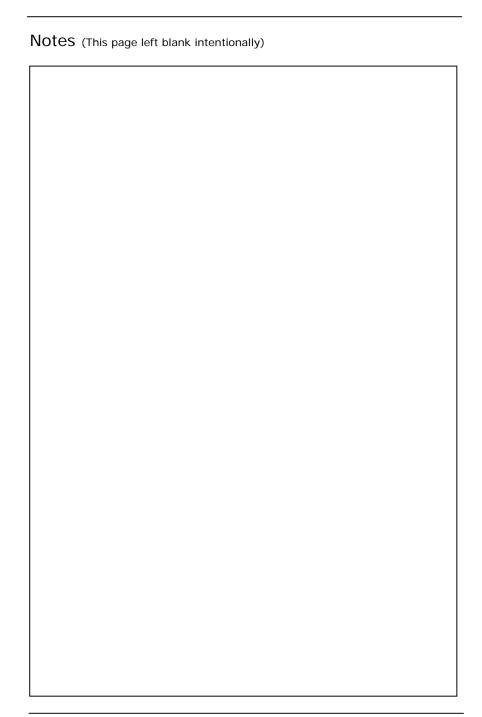

Chapter 4. Driver Installation

The driver CD offers auto-run menu. It will detect and select the type of single board computer and helps you install the drivers automatically.

Install Board's Software

The selection helps you install the drivers of chipset. It will detect your version of OS automatically.

Install Ultra ATA IDE Driver

The selection helps you to install the driver of IDE interface.

Install VGA Driver

The selection helps you to install the driver of onboard VGA interface.

Install LAN Driver

The selection helps you to install the driver of onboard LAN interface.

Install Audio Driver

The selection helps you to install the driver of onboard audio interface.

Install Hi-Speed USB 2.0 Driver


The selection helps you to install the driver of onboard Hi-Speed USB 2.0 interface.

Link to < Website > Homepage

The selection help you to link to the website to find the updated technical documents and download directly.

Browse this CD

The selection helps you to find the drivers in this CD directly.

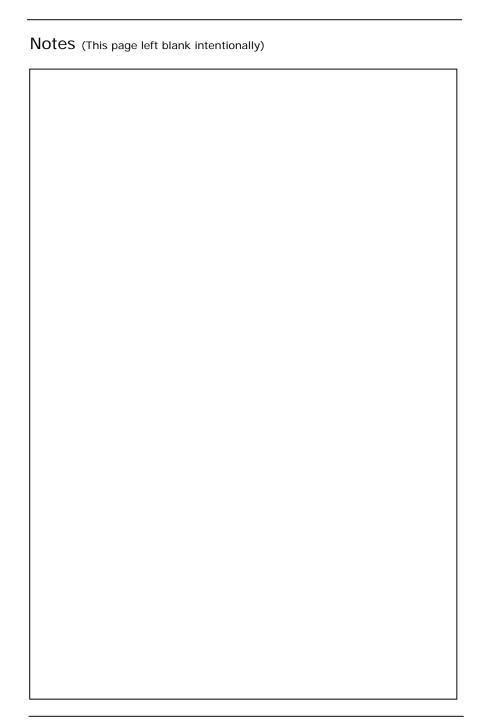

Appendix. A I/O Port Pin Assignment

A.1 IDE Port

Connector: **IDE1**, **IDE2**Type: 40-pin (2 x 20) box header

2
1
40
39

| Pin | Description | Pin | Description |
|-----|-----------------|-----|----------------|
| 1 | Reset | 2 | Ground |
| 3 | D7 | 4 | D8 |
| 5 | D6 | 6 | D9 |
| 7 | D5 | 8 | D10 |
| 9 | D4 | 10 | D11 |
| 11 | D3 | 12 | D12 |
| 13 | D2 | 14 | D13 |
| 15 | D1 | 16 | D14 |
| 17 | D0 | 18 | D15 |
| 19 | Ground | 20 | N/C (Vcc) |
| 21 | REQ | 22 | Ground |
| 23 | IOW-/STOP | 24 | Ground |
| 25 | IOR-/HDMARDY | 26 | Ground |
| 27 | IORDY/DDMARDY | 28 | IDESEL |
| 29 | DACK- | 30 | Ground |
| 31 | IRQ | 32 | N/C |
| 33 | A1 | 34 | CBLID |
| 35 | A0 | 36 | A2 |
| 37 | CS0 (MASTER CS) | 38 | CS1 (SLAVE CS) |
| 39 | LED ACT- | 40 | Ground |

A.2 Floppy Port

Connector: FDD

Type: 34-pin (2 x 17) header



| Pin | Description | Pin | Description | |
|-----|-------------|-----|------------------------|--|
| 1 | Ground | 2 | DRIVE DENSITY SELECT 0 | |
| 3 | Ground | 4 | DRIVE DENSITY SELECT 1 | |
| 5 | Ground | 6 | N/C | |
| 7 | Ground | 8 | INDEX- | |
| 9 | Ground | 10 | MOTOR ENABLE A- | |
| 11 | Ground | 12 | DRIVER SELECT B- | |
| 13 | Ground | 14 | DRIVER SELECT A- | |
| 15 | Ground | 16 | MOTOR ENABLE B- | |
| 17 | Ground | 18 | DIRECTION- | |
| 19 | Ground | 20 | STEP- | |
| 21 | Ground | 22 | WRITE DATA- | |
| 23 | Ground | 24 | WRITE GATE- | |
| 25 | Ground | 26 | TRACK 0- | |
| 27 | Ground | 28 | WRITE PROTECT- | |
| 29 | Ground | 30 | READ DATA- | |
| 31 | Ground | 32 | HEAD SELECT- | |
| 33 | Ground | 34 | DISK CHANGE- | |

A.3 Parallel Port

Connector: LPT

Type: 26-pin box header



| Pin | Description | Pin | Description |
|-----|--------------|-----|---------------|
| 1 | STROBE- | 14 | AUTO FEED- |
| 2 | D0 | 15 | ERROR- |
| 3 | D1 | 16 | INITIALIZE- |
| 4 | D2 | 17 | SELECT INPUT- |
| 5 | D3 | 18 | Ground |
| 6 | D4 | 19 | Ground |
| 7 | D5 | 20 | Ground |
| 8 | D6 | 21 | Ground |
| 9 | D7 | 22 | Ground |
| 10 | ACKNOWLEDGE- | 23 | Ground |
| 11 | BUSY | 24 | Ground |
| 12 | PAPER EMPTY | 25 | Ground |
| 13 | SELECT+ | 26 | N/C |

A.4 Serial Port

A.4.1 Onboard RS-232C Serial Port

Connector: JCOM1, JCOM2

Type: 10-pin header



| Pin | Description | Pin | Description | |
|-----|-------------|-----|-------------|--|
| 1 | DCD | 2 | RXD | |
| 3 | TXD | 4 | DTR | |
| 5 | Ground | 6 | DSR | |
| 7 | RTS | 8 | CTS | |
| 9 | RI | 10 | N/C | |

A.4.2 On Bracket RS-232C Serial Port

Connector: COM1 (FS-977VL only)

Type: 9-pin D-sub male connector on bracket



| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | DCD | 2 | RXD |
| 3 | TXD | 4 | DTR |
| 5 | Ground | 6 | DSR |
| 7 | RTS | 8 | CTS |
| 9 | RI | | |

A.5 USB Port

Connector: USB1, USB2

Type: 10-pin (2 x 5) header for dual USB Ports



| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | Vcc | 6 | Vcc |
| 2 | Data0- | 7 | Data1- |
| 3 | Data0+ | 8 | Data2+ |
| 4 | Ground | 9 | Ground |
| 5 | Ground | 10 | Ground |

A.6 IrDA Port

Connector: JIR

Type: 5-pin (1 x 5) header for SIR Port

| | • | • | • | | |
|---|---|---|---|---|--|
| 1 | | | | 5 | |

| Pin | Description |
|-----|-------------|
| 1 | Vcc |
| 2 | N/C |
| 3 | IRRX |
| 4 | Ground |
| 5 | IRTX |

A.7 VGA Port

Connector: VGA

Type: 15-pin D-sub female connector on bracket




| Pin | Description | Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|-----|-------------|
| 1 | RED | 6 | Ground | 11 | N/C |
| 2 | GREEN | 7 | Ground | 12 | VDDAT |
| 3 | BLUE | 8 | Ground | 13 | HSYNC |
| 4 | N/C | 9 | Vcc | 14 | VSYNC |
| 5 | Ground | 10 | Ground | 15 | VDCLK |

A.8 LAN Port

Connector: LAN1, LAN2(FS-977VL2 only)

Type: RJ45 connector on bracket

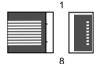

| Pin | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-------------|-----|-----|-----|-----|-----|-----|-----|-----|
| Description | TX+ | TX- | RX+ | N/C | N/C | RX- | N/C | N/C |

A.9 AT Keyboard Port

Connector: JATKB

Type: 5-pin box header

Pin 1 2 3 4 5

Description CLK DATA N/C Ground Vcc

A.10 PS/2 Keyboard and Mouse Port


Connector: PS2

Type: 6-pin MiniDIN connector on bracket

| 1 | 3 | | |
|---|----------|---|---|
| 4 | • | • | 5 |
| 2 | ₹ | ر | 6 |
| _ | 4 | | |

| Pin | 1 | 2 | 3 | 4 | 5 | 6 |
|-------------|-----|-----|--------|-----|-----|-----|
| Description | KBD | MSD | Ground | N/C | KBC | MSC |

Note: The PS/2 connector supports standard PS/2 keyboard directly or both PS/2 keyboard and mouse through the PS/2 Y-type cable. The cable is the standard on packing list.

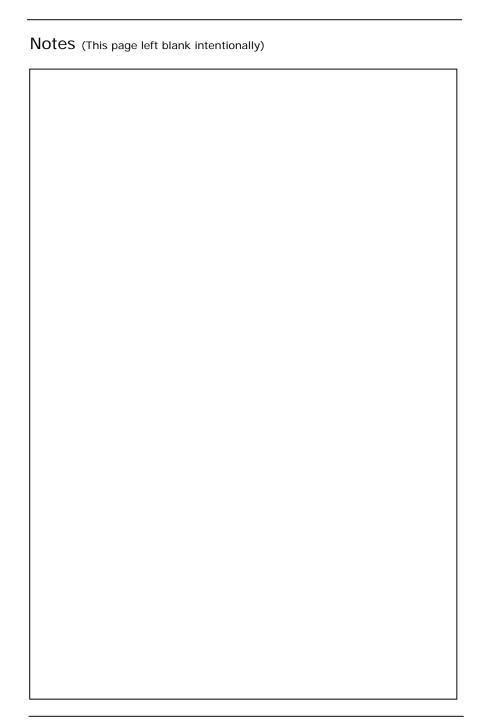

Appendix B. Flash the BIOS

B.1 BIOS Auto Flash Tool


The board is based on Award BIOS and can be updated easily by the BIOS auto flash tool. You can download the tool online at the address below:

http://www.award.com

File name of the tool is "awdflash.exe", it's the utility that can write the data into the BIOS flash ship and update the BIOS.

B.2 Flash Method

- 1. Get the ".bin" file including the image of new BIOS you want to update.
- 2. Power on the system and flash the BIOS.
- 3. Re-start the system.

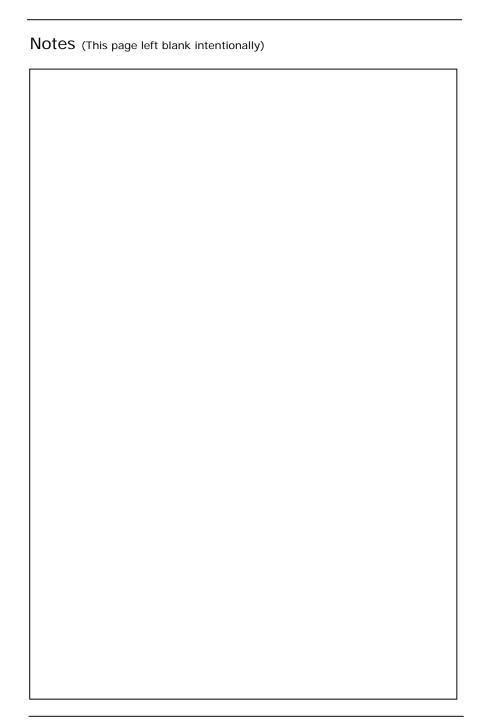

Appendix C. System Resources

C.1 I/O Port Address Map

| Address Range | Device |
|---------------|----------|
| 0060-0060 | i8042prt |
| 0064-0064 | i8042prt |
| 0170-0177 | atapi |
| 01CE-01CF | VgaSave |
| 01F0-01F7 | atapi |
| 02F8-02FE | Serial |
| 0376-0376 | atapi |
| 0378-037A | Parport |
| 0380-038B | VgaSave |
| 03C0-03DF | VgaSave |
| 03F0-03F5 | Floppy |
| 03F6-03F6 | atapi |
| 03F7-03F7 | Floppy |
| 03F8-03FE | Serial |
| C000-C03F | E100B |
| C400-C41D | E100E |
| E000-E0EF | alcxnt |
| E400-E43F | alcxnt |

C.2 Memory Address Map

| Physical Address Length |
|---|
| System board extension for PnP BIOS |
| Intel(R) 82845G/GL Graphics Controller |
| Intel(R) 82845G/GL Graphics Controller |
| Intel(R) 82845G/GL Graphics Controller |
| Motherboard resources |
| Motherboard resources |
| Motherboard resources |
| Motherboard resources |
| System board extension for PnP BIOS |
| Intel(R) 82845G/GL Graphics Controller |
| Intel(R) 82845G/GL Processor to I/O Controller 2560 |
| Intel(R) 82801DB PCI Bridge - 244E |
| Intel(R) GD82559ER PCI Adapter |
| Intel(R) PRO/100 VE Network Connection |
| Intel(R) GD82559ER PCI Adapter |
| Intel(R) 82845G/GL Graphics Controller |
| Intel (R) USB Enhanced Host Controller (ICH4) |
| Avance AC97 Audio |
| Avance AC97 Audio |
| System board extension for PnP BIOS |
| System board extension for PnP BIOS |
| System board extension for PnP BIOS |
| Intel(r) 82802 Firmware Hub Device |
| System board extension for PnP BIOS |
| |

C.3 System IRQ and DMA Resource

C.3.1 IRQ

| IRQ Number | Device |
|------------|---|
| 0 | System timer |
| 1 | Standard 101/102-Key or Microsoft Natural Keyboard |
| 2 | Programmable interrupt controller |
| 3 | Communications Port (COM2) |
| 4 | Communications Port (COM1) |
| 5 | Intel(R) 82801DB/DBM USB Universal Host Controller - 24C2 |
| 5 | IRQ Holder for PCI Steering |
| 5 | Intel(R) 82845G/GL Graphics Controller |
| 6 | Standard Floppy Disk Controller |
| 7 | Printer Port (LPT1) |
| 8 | System CMOS/real time clock |
| 9 | Intel (R) USB Enhanced Host Controller (ICH4) |
| 9 | IRQ Holder for PCI Steering |
| 10 | Avance AC97 Audio |
| 10 | Intel(R) 82801DB/DBM SMBus Controller - 24C3 |
| 10 | Intel(R) GD82559ER PCI Adapter |
| 10 | Intel(R) 82801DB/DBM USB Universal Host Controller - 24C4 |
| 10 | IRQ Holder for PCI Steering |
| 11 | Intel(R) PRO/100 VE Network Connection |
| 11 | Intel(R) 82801DB/DBM USB Universal Host Controller - 24C7 |
| 11 | IRQ Holder for PCI Steering |
| 12 | PS/2 Compatible Mouse Port |
| 13 | Numeric data processor |
| 14 | Primary IDE controller (dual fifo) |
| 14 | Intel(R) 82801DB Ultra ATA Storage Controller - 24CB |
| 15 | Secondary IDE controller (dual fifo) |
| 15 | Intel(R) 82801DB Ultra ATA Storage Controller - 24CB |

C.3.2 DMA

| Channel | Device |
|---------|---------------------------------|
| 0 | (free) |
| 1 | (free) |
| 2 | Standard Floppy Disk Controller |
| 3 | (free) |
| 4 | Direct Memory Access Controller |
| 5 | (free) |
| 6 | (free) |
| 7 | (free) |

| Notes | (This page left blank intentionally) |
|-------|--------------------------------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Contact Information

Any advice or comment about our products and service, or anything we can help you please don't hesitate to contact with us. We will do our best to support you for your products, projects and business.

COMMELL Industrial Computer Taiwan Commate Computer Inc.

Address 8F, No. 94, Sec. 1, Shin Tai Wu Rd., Shi Chih Taipei Hsien, Taiwan TEL +886-2-26963909 FAX +886-2-26963911 Website http://www.commell.com.tw E-mail info@commell.com.tw (General Information) tech@commell.com.tw (Technical Support)

| Authorized Distributor | | |
|------------------------|--|--|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |